

## O-Crest Sound Device List

<b>FOH Speaker</b>	NEXO	PS15 (Full Range)	4
		LS1200 (Sub Low)	4
<b>FOH Power Amp</b>	YAMAHA	T5n	2
<b>Speaker Controler</b>	NEXO	NX242	1
<b>FOH Console</b>	YAMAHA	M7CL-48	1
<b>Monitor Speaker</b>	EV	TX1152FM	7
		SX300(SIDE FILL)	2
<b>Monitor Power Amp</b>	QSC	PL325	4
<b>EQ</b>	KLARK-TEKNIK	DN360	1
<b>Effecter</b>	Lexicon	MPX550 (Reverb)	1
	YAMAHA	SPX2000 (Multi FX)	2
	t.c.electronic	D•Two (Delay)	1
<b>Play Back • Recorder</b>	TASCAM	CD-01U Pro (CD)	1
		CD-500B(CD)	1
		CD-RW900SL (CD-R)	1
	SONY	MDS-E10/8 (MD)	2

<b>Mic</b>	SHURE	SM58-LCE	2
		SM58S	2
		SM57-LCE	4
		Beta58A	8
		Beta57A	8
	SENNHEISER	BETA52A	2
		Beta91A	1
		e904	5
		e906	1
		EV	N/D468
AKG	C391B	4	
<b>DI</b>	COUNTRYMAN	TYPE-85	8
		TYPE-85S	2
<b>Mic Stand</b>	K&M	ST210/2	8
		ST259	8
<b>In Com</b>	Clear-Com	MS-232	1
		RS-501	3
		CC95	4